


SP-K Version 2.7+

Some of the parameters visible below will not appear if its respective MDB peripheral is not detected on power-up (ie. Bill acceptor).

Remove power, press both buttons while applying power back. Release buttons when screen goes blank

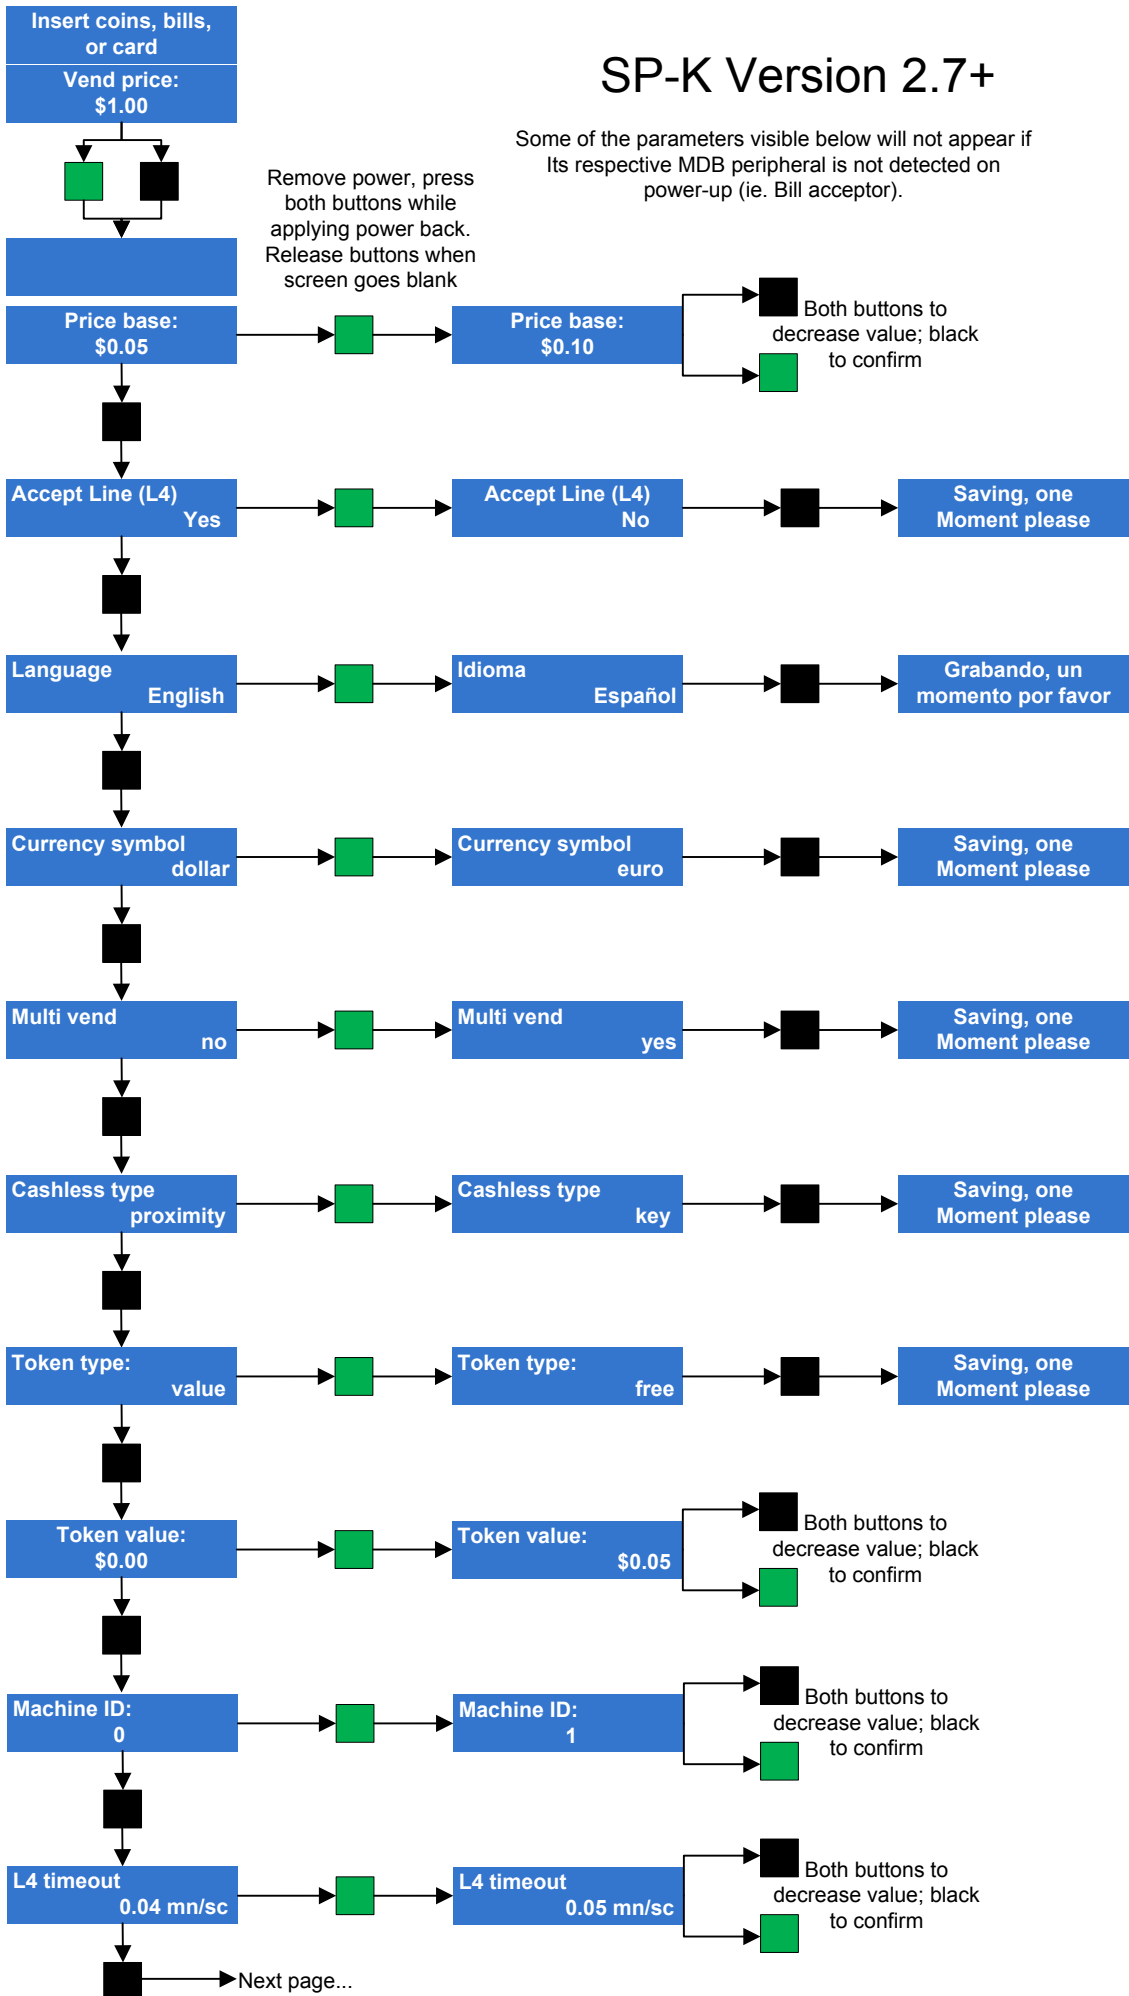

Choices are English, French, Portuguese, and Spanish


Choices are Dollar, Euro, and none.

Not visible if you have a coin changer.

Choices are insertion, swipe, proximity, key, and tag

Free means one free transaction; value means a certain value i.e. 50¢

...from the previous page

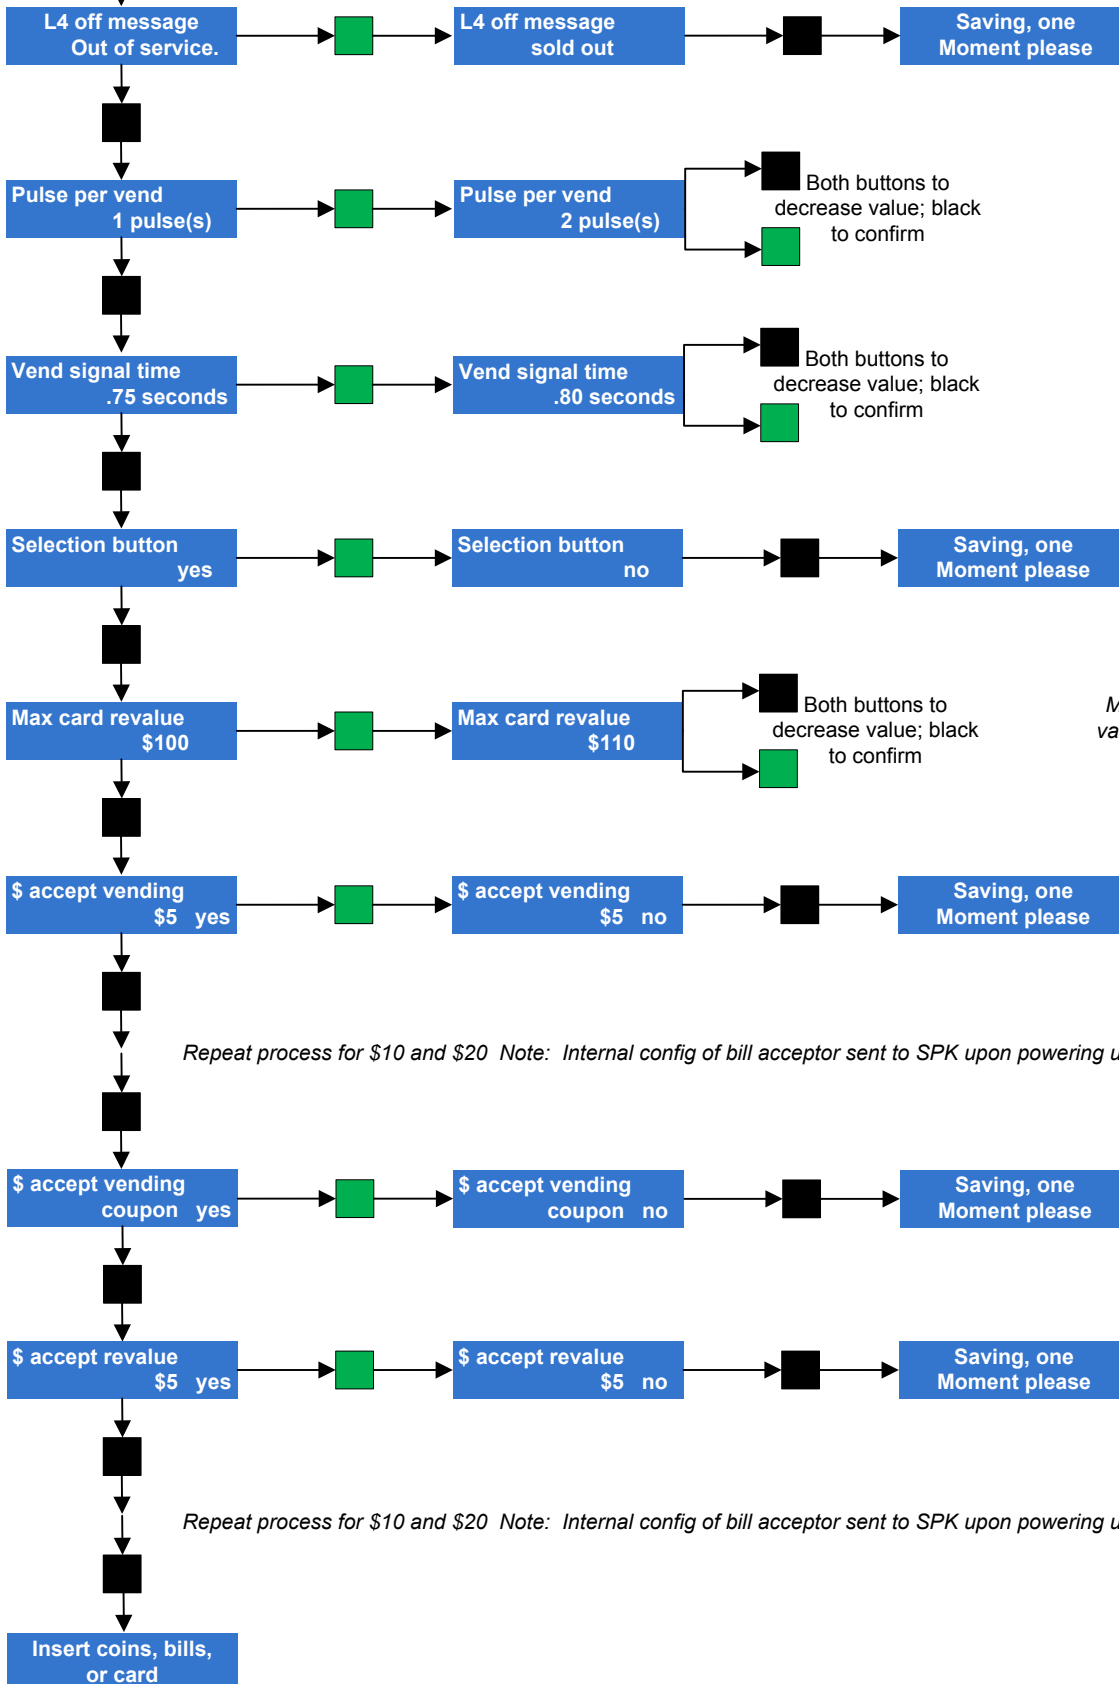

Must be \$20 lower than the max value programmed into the reader itself.